


Advertising Frame Manual

EOOKE

www.digitalframe0.com

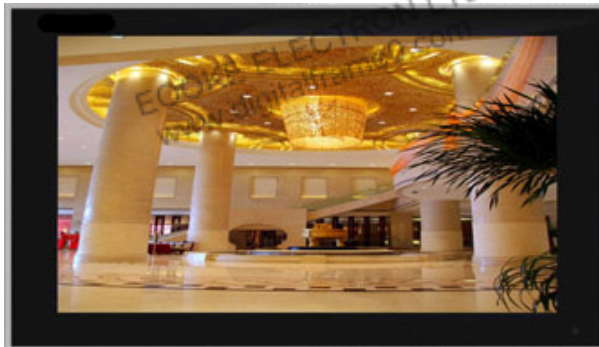


V111108

Copyright © 2011 EOOKE ELECTRON. ALL RIGHTS RESERVED.

Contents

Caution	1
Recommendation & Support Format	1
Installation Guide	2
Remote Control	3
Operation Caution	3
Main Page	4
General Setup	4
Video Setup	4
Calendar Setup	5
Rolltxt Setup	6
Cust Setup	6,7
Copy Function	8
Play in order	8
Playlist Setup	9
Trouble Shooting	10

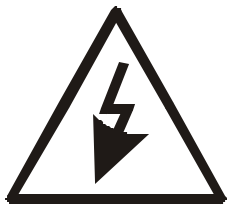

CAUTION



**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO
NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE
REFER SERVICING TO QUALIFIED SERVICE PER-
SONNEL**



STOP



AVOID WATER



DO NOT OPEN




**WHEN WET
DO NOT PLUG IN**



Do not place the LCD AD frame on an uneven surface.



Installation Guide

Wall Bracket: Style one

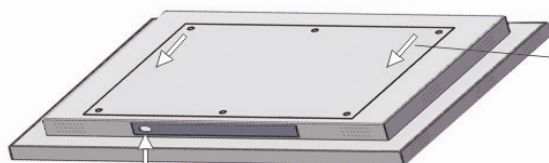


Installation guide:

 1. Open the small door in the bottom of the player, you may see an anti-theft screw inside.
2. Unscrew around 2cm.

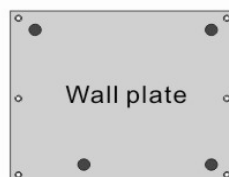

4. Fix the wall plate on the wall.
5. Hang the AD frame on the wall plate.
6. Screw anti-theft screw back (Important)

Wall Bracket: Style two

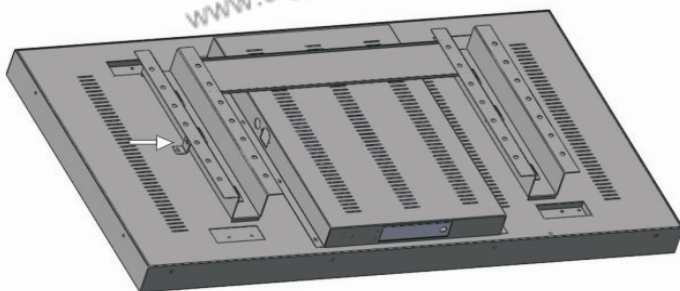

Installation guide:

1. Unscrew on the both sides of the frame .
2. Take off the plate.
3. Fix the wall plate on the wall.
4. Hang the AD frame on the wall plate.
5. Fix the screws.

Remote Control



POWER: Turn on/off the frame

FILE: File list

DISP: Display time. Display file detail on "File list" screen.

MODE: Repeat all / Repeat one / Cancel repeat

BGM: Slideshow with background music.

ZOOM: Zoom in/out.

ENTER: Enter

SETUP: Enter Setup menu.

RETURN: Return /choice SD/CF/USB media cards.

MUTE:

VOL-: Volume down

VOL+: Volume up

BCC: Adjust brightness, contrast & colors (Available only @480P mode)

EQ: Equalizers

COPY: Copy files.

DEL: Delete files.

AUDIO: Left / Right / Stereo

VIDEO: 480P / 480I / 720P

AV: YPBPR/ VGA

1-9: Select 1~9 file

10+/PROJ: Program playlist manually.

▶ Play/Pause

◀◀ Fast backward

◀◀ Last file

■ Stop

▶▶ Fast forward

▶▶ Next file

↑ UP

← Left


↓ Down

→ Right

Operation Caution


1. Please press "Stop" button before any further operation when the frame is broadcasting/playing.
2. Please don't press "Fast forward" and "Fast backward" buttons continuously, or it'll cause black Screen.
3. Please don't use "Renew" or "System restore" function, or all your setting will lose.

Main Page

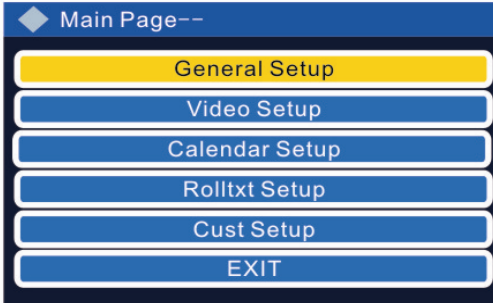

1. Press **ESC** to stop playing and back to main screen press **SETUP** enter main page for setting.
2. Press **UP**/**DOWN** select, the selected file show in yellow color.
3. Press **ENTER** to submenu.
4. Press **LEFT**/**RIGHT** enter setup in the submenu.
5. MainPage back to main page.
6. Press **SETUP** save setting and start broadcast. Press **EXIT** without save setting and start broadcast.

General Setup

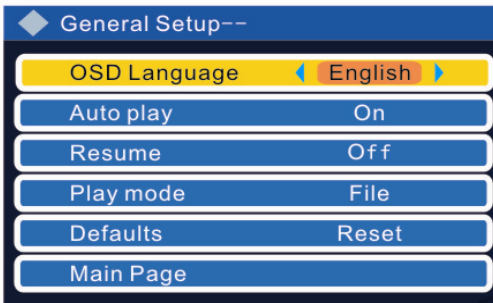

Language: Chinese/ English

Auto play: auto play when power on.


Resume: play the last playing file when power on.

Play mode: play video/ photo/ music/ photo+music/ files.

Defaults (reset): Discard all your customized setting and restore default setting.

Main page: back to main page.

Video Setup

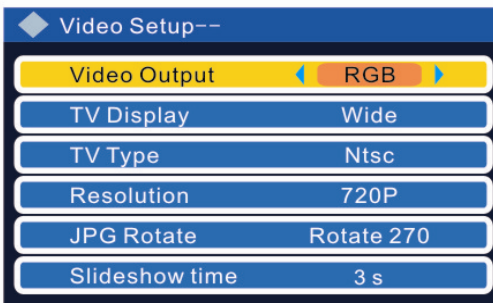

Video output: Only available on certain frames

TV display: 4:3PS/4:3LB/WIDE

TV type: NTSC is recommend.

Resolution: 720P is recommend.

Rotate: suit for vertical type LCD (rotate 270).

Slideshow time: picture show time.(1 to 25 seconds)

Sildeshow mode: picture play mode(random/ normal/ implode/ fade/T-B....)

Random: irregular slideshow.

T->B: downward slideshow.

B->T: upward slideshow.

T/B->C: from up & down to center.

C->T/B: from center to up & down stretch.

BLD:T->B: up to down transition.

L->R: left to right slideshow.


L/R->C: from left & right to center stretch.

C->L/R: from center to left & right stretch.

Implode: from 4sides to center stretch.

BLD:L->R: from left to right transition.

Calendar Setup

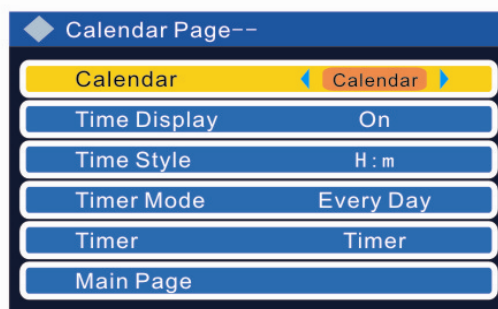

Calendar : Press enter setup,(see page 2).


Time display : on / off

Time style: Y/year, M/month, D/day, W/week, H/hour, M/minute, S/second.

Timer mode: every day/ every week.

(power on and off at specified time in every day or every week.)


Timer: Press enter timer sub-menu.(see below)

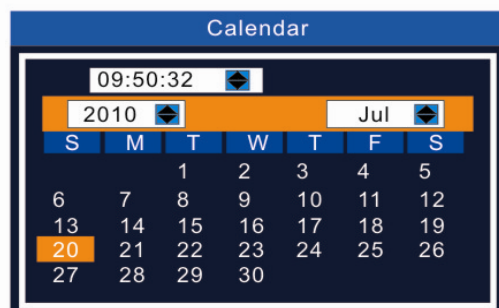

Press move to setup time/ year/ month/ date.

Press move and adjust time/ date / moth/ year.

Press ENTER for confirm.

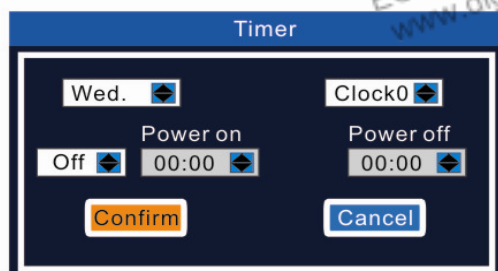

Wed. : power on and off at specified time Wednesday.

Five clocks group total , clock 0 to clock 4,

ON/OFF: Turn on/off this group.

Power on / power off: set times.

Confirm: confirm setting and back to Calendar page.

Candel: without save setting.

Sample 1:

Timer mode: every day

Timer: clock 0: on, power on: 09:00, power off: 13:00

clock 1: on, power on: 14:00, power off: 18:00

clock 2, 3, 4, set off

Sample 2:


Timer mode: every week

Monday to Friday: timer on,

Saturday & Sunday: timer off.

Remark: Timer function will not work when you turn off the frame manually during auto on/off time scale. The frame will auto-power-off in 15 seconds when you turn on the frame manually during auo-off time scale.

Rolltxt Setup

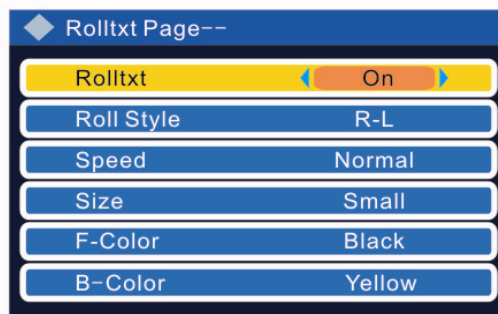

Rolltxt: on / off

Position: bottom/ top

Roll style: R-L/ D-U/ Fade

Speed: slow/ normal/ fast


Size: small/ normal/ big

F-Color: black/ blue/ yellow/ red/ grey/ magenta/ white.

B-Color: colors/ Trans/ H-Trans/ white

Setup rolltxt: Creat one textfile on computer, rename ROLLTXT.ROL, edit it as right photo.

Note: the name should be capital.

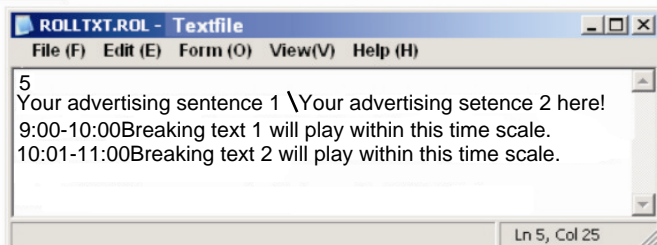

Editing Rolltxt:

First line: Interval time in seconds

Second line: Main rolling text.

Third line/ Fourth line: Display special text at designated time.

Roll style: down to up, right to left, fade.

Note: Do not use "Enter" button to separate each sentence, pls use " \ ", instead of "Enter", to separate each sentence.


For example: Your sentence 1\Your sentence 2

After editing, copy the textfile



to CF card then insert the card to the frame.

Cust Setup

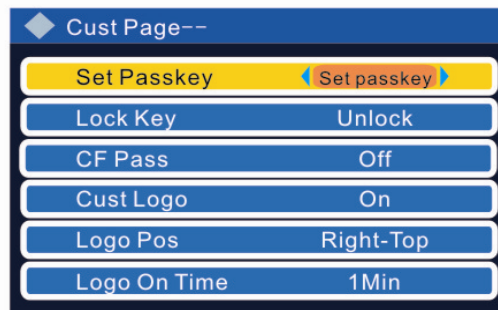

Set passkey: press ➡ enter setting, see next page.

Lock key: default unlock.

CF Pass: password of CF card

We suggest don't set this password. You can not access to the frame/card if you forget the password.

Cust Setup




Press **←→↑↓** and "Enter" to set up password.
8 numbers in total.

Setup Logo: open photoshop software, creat new file @ 200*64 or 100*32 pixel. Then select Photoshop menu> image> mode> index color> palette/force> custom colors> download file ESS256_FULLL.act (the file you may download from website www.digitalframe0.com)
Save as BMP format file when all are done, then name as TAIBIAO.LOG,at last save it to CF card.

Logo on time: logo display timing.

Logo off time: logo disappear timing.

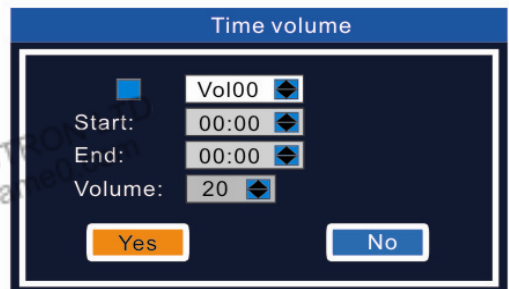

Time volume: set up volume in specified time, 5 groups volume can be set. Press **↵** enter to setup.

Press **←→** move the cursor, press **↑↓** adjust the volume, press ENTER to save setting.

Yes: saving and back to CUST PAGE; **No:** Back to Cust Page withou saving any thing.

(Note: Time Volume can not be changed when the frame is playing. The frame will give priority to "PlayList Volume ". when you set volume at "Playlist")


VOL- key in remote control, can set the minimum volume 00 to maximum 32.

Playlist Record: Record time and start time/end time/"stop" time/total playing time of each file on every day. The file will be named as "xxx.HHH" and save to cards eg: on 2011.11.08, the file will same as "20111108.HHH". It's a textfile.

Record Storage: 5/7/10/15/20/25 days available.

UI Style: Display menu vertically.

Copy Function

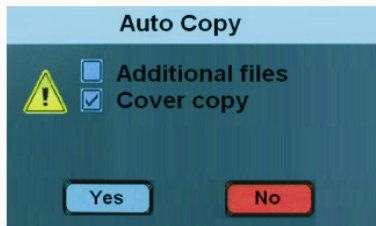

1, Copy manually

"Auto Copy" menu will pop-up when usb is inserted in.

Press **↑****↓** select Additional file or Cover copy, press ENTER confirm your selecting.

Yes: Click yes to start .

No: Click to quit copy and play files from USB driver.

Additional file: copy new file from USB card to CF card.

Cover copy: Format CF card first then copy files from USB to CF card.

2, Copy automatically

Create a file named "ZZZ.FLG" or ""ZZZZ.FLG" to the USB disk,

ZZZ.FLG: Copy new files only.

ZZZZ.FLG: Copy and overwire all files.

Please note: Auto Copy will run in the background when the frame is playing.

The frame is not able to copy any folder.

During playing, Auto Copy will run in the background when insert USB.

3, Single file copy: Insert USB to the frame, press "File" to enter file list screen.

Select the file you wise to copy, press "COPY", press **↑** to choice target media card.

Play in Numeritical/Alphabetical order

Play filies in numeriical/alphabetical order by the first/second letter of file name.

Play in order as following:

1. Play number "1~9" first. (10 or above are not allowed) eg. play 1.jpg then 2.avi :
2. Play "a~z" secondly. eg. 1.jpg, then 2.avi, then a.jpg....
3. Play "A~Z" at last, eg. 1.jpg~2.avi~a.jpg~b.avi~A.avi~B.jpg

Please note:

1. Number 10 or above not allow.
2. The frame will play file in Playlist prior when you set up playlist.

 

See samples below.

```
1. jpg >> 2. jpg >> 3. jpg >> 31. jpg >> 32. jpg >> 31a. jpg >>
3a. jpg >> 3a . jpg >> 3b . jpg >> 4. jpg >> 9. jpg >> A. jpg
>> B. jpg >> C. avi >> C1. jpg >> C2. jpg >> c2a. jpg >> ca. jpg
>> D. vob >>
```


Playlist



is required to create/edit playing list. Please download it from Digitalframe0.com or get it by sending us an email (support@digitalframe0.com).

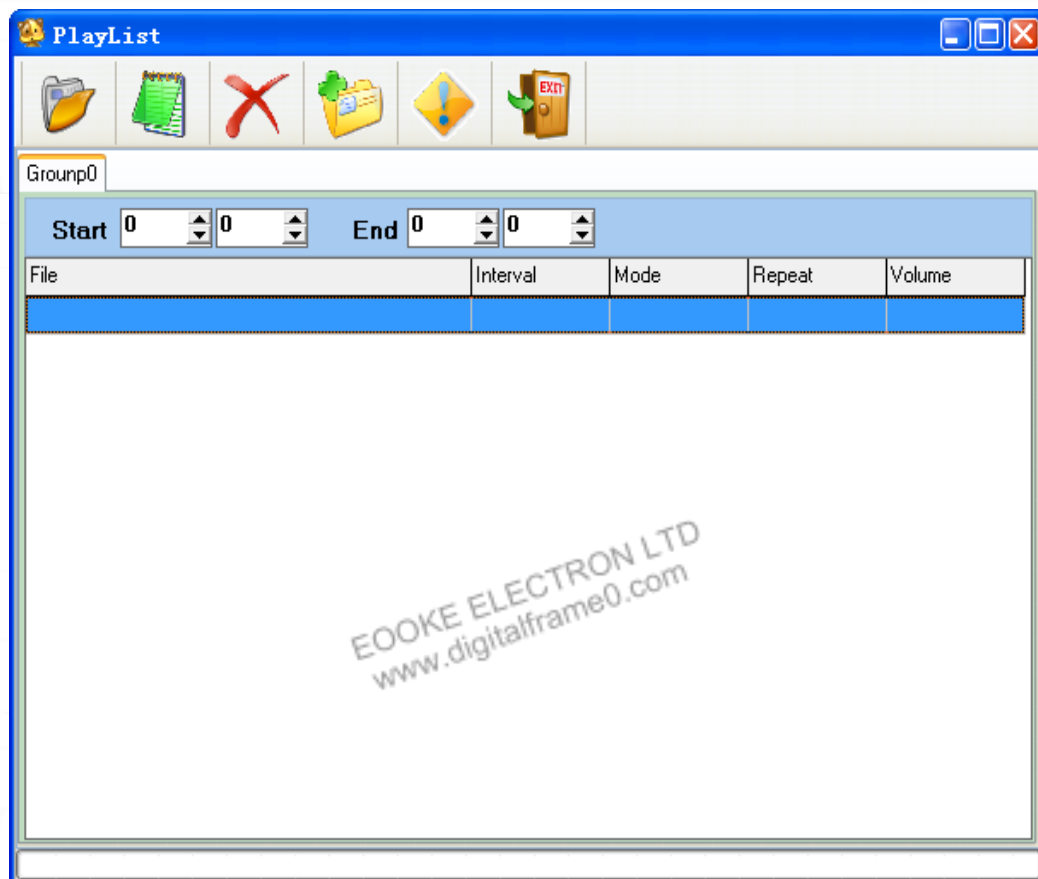

: Open playlist

 

: Create playlist group



: Delete playlist group



: Save playlist



: About



: Exit playlist

Guide to creat Playlist:

1. Click to create a new time group. Each page is a separate "Time group", 8 pages max.
2. Enter/select Start time and End time. Start time must ahead of End time. No overlapping time.
3. Double click the blue file area to add file. Right click file ares to add/insert/delete row/item.
4. Click to save playlist. You can save the file in four different name.
 - 1) **PLAYLIST** when save file in "PLAYLIST", the frame will play playlist every day.
 - 1) **PLISTM01** "PLISTM01" mean only play in January, "PLAYLISTM12" mean December, etc.
 - 1) **PLISTW00** "PLISTW00" mean only play in Sunday, "PLAYLISTW06" mean Saturday, etc.
 - 4) **PLISTD01** "PLISTD01" only play on day 1 /every month, "PLAYLISTD31" play on day 31.
5. Copy playlist xml file and all media files listed on the list to root directory of media card.

Trouble Shooting

1. The frame not work.

Check the wire and power source and make sure you turn on the switch.

2. The remote not working.

Replace the battery. Make sure press "Stop" button before try another operation.

3. The card/usb not working. The screen flashing.

Make sure no folder on the card or USB. Make sure the video resolution is no bigger than 720*576.

4. The frame auto off in 15 seconds when power on.

During auto-power-off time scale, the frame will auto-power-off in 15 seconds when you turn on the frame manually. More please check Remark on page 5.

Still have question?

Please send your question to support@digitalframe0.com

EOOKE ELECTRON LTD
www.digitalframe0.com